


## Using Neuros OSD to Record on a USB device:

---

**Note:** Configuration of cabinet may be slightly different in different rooms.

1. Turn on television monitor with the **Power** button. If necessary turn off projector.
2. Make sure the input selected on monitor is set to Input B.
3. Plug in your **USB** drive into the **card reader**.
4. On the **Neuros OSD remote**, press **Enter**. (**IMPORTANT:** It may be necessary to point remote toward USB area for the signal to transfer.) The following menu options will display on the monitor.
5. Scroll to select **Record – Schedule**. Press **Enter**.
6. Scroll and select **Recording Settings**. Press **Enter**.
7. You will then **select a playback device**. **Record for playback on TV** should automatically be selected on the right-hand side. Once it is highlighted, press **Enter**.

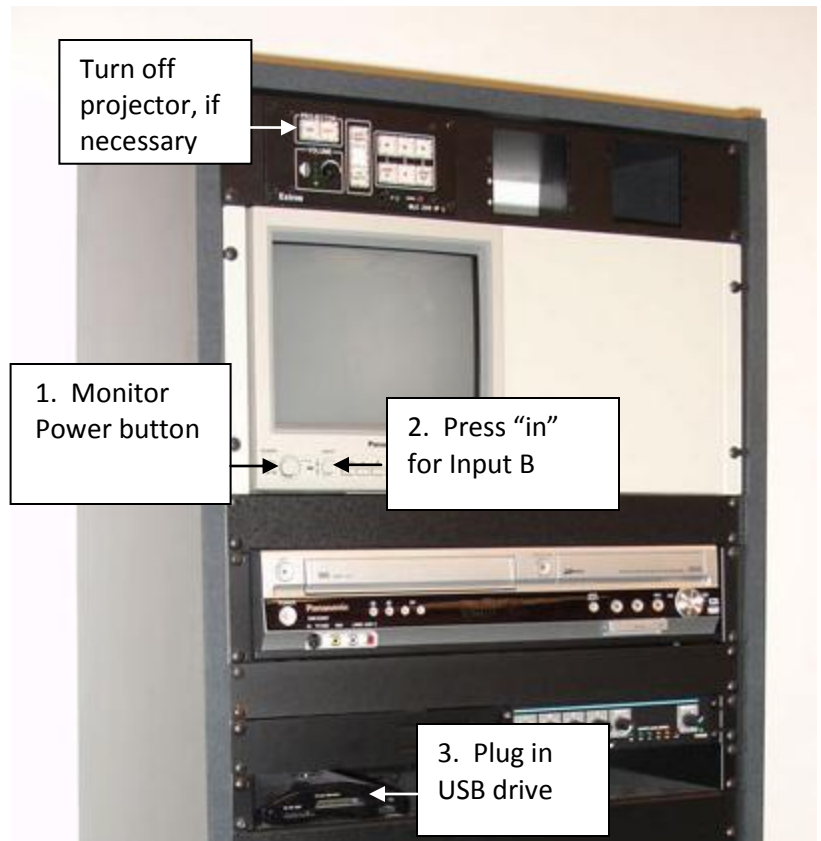

8. Optional: Select the **length of the recording** in hours and minutes. Use the keypad on the remote to change the time. Press **Enter**. (This does not need to be modified unless the recording will be longer than 30 minutes.)
9. Select the **storage device** you want your project saved too. Since you have entered a USB drive, scroll down to select **USB**; then press **Enter**. (The available space on the USB will be noted on the screen)
10. The Neuros OSD will **confirm** that you want to record using the settings you selected. If you are satisfied, select **Yes**. (Use default file name.) Otherwise, select **Cancel** and reenter your information. When you select **Yes**, your presentation will begin recording.
11. When you are finished presenting/recording, press the **Enter** button on your remote to **stop recording**.
12. Press the **Enter** button again to finish your project. You will see a flashing, circle-shaped icon with the words "Finishing Recording" above it.
13. When the "Finish Recording" process is complete, you will be returned to the main screen. If not, press the **Back** button on the remote to go to the main screen.
14. Scroll to select **Play-Browse** and press **Enter**.
15. Choose the **USB option** and press the \* (**asterisk**) key on the remote.
16. Scroll down to highlight **Eject** and press **Enter**.
17. Wait 2-3 seconds before removing the USB drive to ensure that the process is complete.
18. You can now safely remove the USB drive and view the files on your computer.
19. When all recordings are complete, please turn off the monitor with the **Power** button.

For problems, please call the IT Help Desk, 612-625-5550.